

Old situation



Old system with only one ferrite, placed in the middle of the output cable.

With the cable in a loop through the ferrite ring.


(Connection of charger to battery)

Work Instructions for assembly Ferrites



New Assembly with two ferrites, one placed near the charger and the other near the battery. Fix the ferrites with plastic clamps as shown in the pictures..

2 Ferrite rings around charger cable

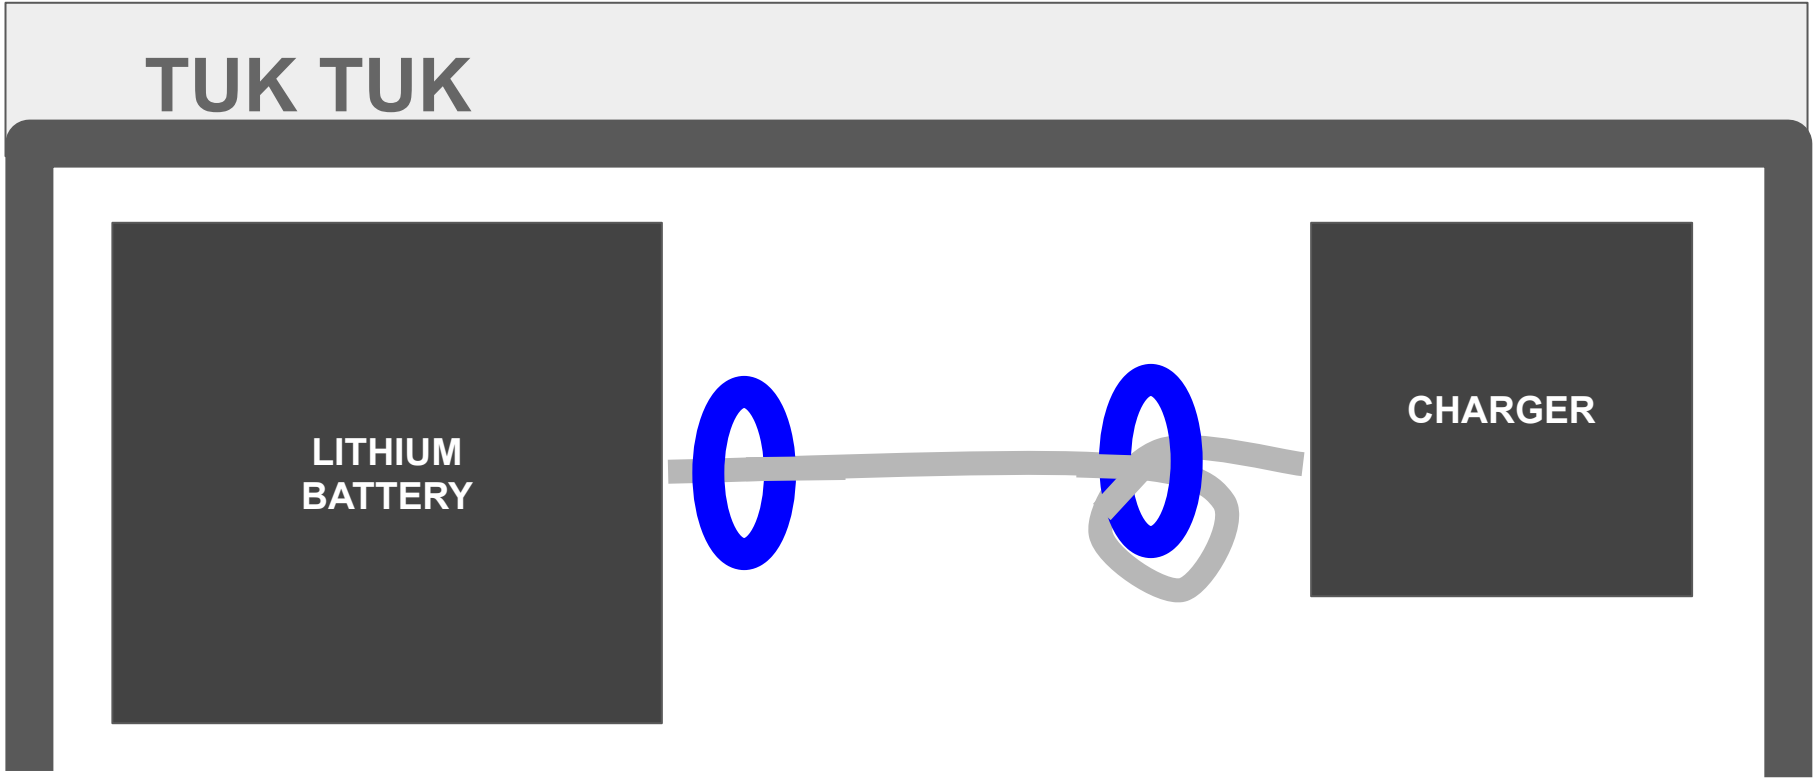

6 STEPS

1. Switch off vehicle and charger
2. Disconnect the charger to battery power cable
3. Add 1 extra blue ferrite ring to the charger to battery power cable
4. Move the ferrite ring with the loop of the cable closer to the charger and fix with a tie-wrap
5. Fix the 2d ferrite ring to the battery box cables, the charge cable needs to run through the ring.
6. Connect the charge cable to the battery.

Ready